

INSTALL QUICK GUIDE – ZMC-DUAL A/C STATION

SERVICE & SUPPORT- 01952 457 207 WWW.ZMCOOLING.CO.UK



UNPACK-

Remove banding from pallet.

Lift cardboard lid off the top of pallet.

Remove protective cover.

Remove securing wood from behind rear wheels.

The unit weights approx. 130kg.

Due to the unit weight we advise to create a ramp or step down to gently lower the unit off the pallet.

Do not lift or drop unit off the pallet as personal injury or damage to the unit can occur.



Damage to the unit or its wheels or castors during installation will not be covered under warranty. Nor any liability for personal injury.

PARTS LIST-

Included with unit should be-

- 1x Quick Guide
- 1x Mains Cable
- 1x Operators Manual
- 2x HYBRID Oil Bottle.
- 2x Security Vale Ring Pulls



UNLOCK THE SCALE-

Scale lock is located under the front of the unit, right hand side.

Pull scale lock lever fully towards you.



Scale lock indicator showing scale is unlocked.

Fit security valve rings pulls to both security valves on rear of unit.

CONNECT POWER-

Connect mains cable supplied and switch on.

Please note: If using an extension lead.
We recommend using an extension no longer than 7.5m and fully un-coiled.

Unit will now show home screen.



BOTTLE FILLING- Connect **HP** bottle adapter to virgin refrigerant bottle.

Note: R1234yf bottles are left hand thread.

Connect **HP** coupler/hose to tank and screw coupler.

Open virgin refrigerant bottle and invert.

Open **HP** tap on front of unit.

HP gauge should now show refrigerant pressure.



BOTTLE FILLING- *Continued* (Note: MAX fill weight 10kg)

Touch the **HOME** screen to access **MENU**

Select **TANK (A)**

Display will show the amount of refrigerant to refill in grams.
Initial fill amount should be 4kg.

Scroll **UP** to select **4000g** to refill and Press **ENTER**

Refill will pause once the amount has been transferred. Close tap on bottle and Press **ENTER**

Remaining refrigerant in hose will be recovered. Once completed, disconnect **HP** hose from bottle.

Close **HP** tap on front of machine.

Your installation is now complete and unit is ready to use.

Please refer to the operator's quick guide.