

# INSTALL QUICK GUIDE – ZMC-EVO R134A & R1234YF A/C STATION

SERVICE & SUPPORT- 01952 457 207 WWW.ZMCOOLING.CO.UK



## UNPACK-

Remove banding from pallet.

Lift cardboard lid off the top of pallet.

Remove protective cover.

With assistance (two-man lift) tilt unit from the handle on rear of unit and lift unit off pallet.


## PARTS LIST-

Included with unit should be-

1x Quick Guide

1x Mains Cable

1x HS Bottle Adapter

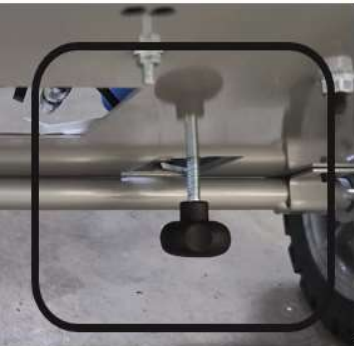

## UNLOCK THE SCALE-

Remove the scale lock under the unit before the switching on



## CONNECT POWER-

The ON/OFF switch along with power connector is located on the left side of the unit.

Connect mains cable supplied and switch on.

Please note: If using an extension lead. We recommend using an extension no longer than 7.5m and fully uncoiled.

Unit will now show stand-by screen.

Refrigerant can cause severe burns or frostbite when contacting the skin. It's recommended that suitable refrigerant gloves and goggles are always worn while handling refrigerants.



## BOTTLE FILLING-


Connect **HP** bottle adapter to virgin refrigerant bottle.

Note: R1234yf bottles are left hand thread.

Connect **HP** coupler/hose to tank and screw coupler.

Open virgin refrigerant bottle and invert.

Open **HP** tap on front of unit.

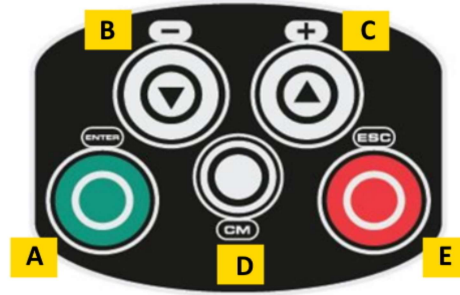

**BOTTLE FILLING-**      *Continued*      (Note: MAX fill weight 8kg)

Using Keypad Scroll **DOWN** (B) to **BOTTLE REFILL** and Press **ENTER** (A)

Display will show the amount of refrigerant to refill in grams.  
Initial fill amount should be 4kg.

Scroll **UP** (C) to select **4000g** to refill and Press **ENTER** (A)

Refill will pause once the amount has been transferred. Close tap on bottle and Press **ENTER** (A)

Remaining refrigerant in hose will be recovered. Once completed, disconnect **HP** hose from bottle.

Close **HP** tap on front of machine.

**Your installation is now complete and unit is ready to use.**

**Please refer to the operator's quick guide.**

**Copies available at [www.zmcooling.co.uk/support](http://www.zmcooling.co.uk/support)**